

**Alcatel 5035D,**  
**Apple iPad Pro,**  
**Apple iPhone 6 plus,**  
**Apple iPhone 6s,**  
**Apple iPhone 7 plus,**  
**Apple iPhone 7,**  
**Apple iPhone 8 plus,**  
**Apple iPhone 8,**  
**Apple iPhone SE,**  
**Apple iPhone X,**  
**Apple iPhone 12 Pro\*\*\*\*,**  
**Apple iPhone 12 Pro Max\*\*\*\*,**  
**Apple iPhone 13 Pro\*\*\*\*,**  
**Apple iPhone 13 Pro Max\*\*\*\*,**  
**Apple iPhone 14 Pro\*\*\*\*,**  
**Apple iPhone 14 Pro Max\*\*\*\*,**  
**Apple iPhone 15 Pro\*\*\*\*,**  
**Apple iPhone 15 Pro Max\*\*\*\*,**  
**Apple iPhone 16 Pro\*\*\*\*,**  
**Apple iPhone 16 Pro Max\*\*\*\*,**  
**Apple QuickTake 100,**  
**Apple QuickTake 150,**  
**Apple QuickTake 200,**  
**BlackMagic Cinema Camera,**  
**BlackMagic Micro Cinema Camera,**  
**BlackMagic Pocket Cinema Camera,**  
**BlackMagic Production Camera 4k,**  
**BlackMagic URSA Mini 4.6k,**  
**BlackMagic URSA Mini 4k,**  
**BlackMagic URSA Mini Pro 4.6k,**  
**BlackMagic URSA,**  
**Canon EOS 1000D / Rebel XS / Kiss Digital F,**  
**Canon EOS 100D / Rebel SL1 / Kiss X7,**  
**Canon EOS 10D,**  
**Canon EOS 1100D / Rebel T3 / Kiss Digital X50,**  
**Canon EOS 1200D / Rebel T5 / Kiss X70,**  
**Canon EOS 1300D / Rebel T6 / Kiss X80,**  
**Canon EOS 1500D / 2000D / Rebel T7 / Kiss X90,**  
**Canon EOS 200D / Rebel SL2 / Kiss X9,**  
**Canon EOS 20D,**  
**Canon EOS 20Da,**

Canon EOS 250D / 200D II / Rebel SL3 / Kiss X10,  
Canon EOS 3000D / Rebel T100 / 4000D,  
Canon EOS 300D / Rebel / Kiss Digital,  
Canon EOS 30D,  
Canon EOS 350D / Rebel XT / Kiss Digital N,  
Canon EOS 400D / Rebel XTi / Kiss Digital X,  
Canon EOS 40D,  
Canon EOS 450D / Rebel XSi / Kiss Digital X2,  
Canon EOS 500D / Rebel T1i / Kiss Digital X3,  
Canon EOS 50D,  
Canon EOS 550D / Rebel T2i / Kiss Digital X4,  
Canon EOS 5D Mark II,  
Canon EOS 5D Mark III,  
Canon EOS 5D Mark IV,  
Canon EOS 5D,  
Canon EOS 5DS R,  
Canon EOS 5DS,  
Canon EOS 600D / Rebel T3i / Kiss Digital X5,  
Canon EOS 60D,  
Canon EOS 60Da,  
Canon EOS 650D / Rebel T4i / Kiss Digital X6i,  
Canon EOS 6D Mark II,  
Canon EOS 6D,  
Canon EOS 700D / Rebel T5i / Kiss X7i,  
Canon EOS 70D,  
Canon EOS 750D / Rebel T6i / Kiss X8i,  
Canon EOS 760D / Rebel T6S / 8000D,  
Canon EOS 77D / 9000D,  
Canon EOS 7D Mark II,  
Canon EOS 7D,  
Canon EOS 800D / Rebel T7i / Kiss X9i,  
Canon EOS 850D / Rebel T8i / Kiss X10i,  
Canon EOS 80D,  
Canon EOS 90D,  
Canon EOS C50,  
Canon EOS C500,  
Canon EOS D2000C,  
Canon EOS D30,  
Canon EOS D60,  
Canon EOS M,  
Canon EOS M10,

**Canon EOS M100,  
Canon EOS M2,  
Canon EOS M200,  
Canon EOS M3,  
Canon EOS M5,  
Canon EOS M50,  
Canon EOS M50 Mark II,  
Canon EOS M6 Mark II,  
Canon EOS M6,  
Canon EOS R,  
Canon EOS R1,  
Canon EOS R10,  
Canon EOS R100,  
Canon EOS R3,  
Canon EOS R5,  
Canon EOS R5 Mark II,  
Canon EOS R50,  
Canon EOS R50 V,  
Canon EOS R6,  
Canon EOS R6 Mark II,  
Canon EOS R6 Mark III,  
Canon EOS R7,  
Canon EOS R8,  
Canon EOS RP,  
Canon EOS-1D C,  
Canon EOS-1D Mark II N,  
Canon EOS-1D Mark II,  
Canon EOS-1D Mark III,  
Canon EOS-1D Mark IV,  
Canon EOS-1D X Mark II,  
Canon EOS-1D X Mark III,  
Canon EOS-1D X,  
Canon EOS-1Ds Mark II,  
Canon EOS-1Ds Mark III,  
Canon EOS-1DS,  
Canon PowerShot 600,  
Canon PowerShot A3300 IS,  
Canon PowerShot A410,  
Canon PowerShot A460,  
Canon PowerShot A470,  
Canon PowerShot A5 Zoom,**

Canon PowerShot A5,  
Canon PowerShot A50,  
Canon PowerShot A530,  
Canon PowerShot A540,  
Canon PowerShot A550,  
Canon PowerShot A570,  
Canon PowerShot A590,  
Canon PowerShot A610,  
Canon PowerShot A620,  
Canon PowerShot A630,  
Canon PowerShot A640,  
Canon PowerShot A650,  
Canon PowerShot A710 IS,  
Canon PowerShot A720 IS,  
Canon PowerShot D10,  
Canon PowerShot ELPH 130 IS,  
Canon PowerShot ELPH 160 IS,  
Canon PowerShot G1 X Mark II,  
Canon PowerShot G1 X Mark III,  
Canon PowerShot G1 X,  
Canon PowerShot G1,  
Canon PowerShot G10,  
Canon PowerShot G11,  
Canon PowerShot G12,  
Canon PowerShot G15,  
Canon PowerShot G16,  
Canon PowerShot G2,  
Canon PowerShot G3 X,  
Canon PowerShot G3,  
Canon PowerShot G5 X Mark II,  
Canon PowerShot G5 X,  
Canon PowerShot G5,  
Canon PowerShot G6,  
Canon PowerShot G7 X Mark II,  
Canon PowerShot G7 X Mark III,  
Canon PowerShot G7 X,  
Canon PowerShot G7,  
Canon PowerShot G9 X Mark II,  
Canon PowerShot G9 X,  
Canon PowerShot G9,  
Canon PowerShot IXUS 160,

**Canon PowerShot IXUS 900Ti,  
Canon PowerShot Pro1,  
Canon PowerShot Pro70,  
Canon PowerShot Pro90 IS,  
Canon PowerShot S100,  
Canon PowerShot S100V,  
Canon PowerShot S110,  
Canon PowerShot S120,  
Canon PowerShot S2 IS,  
Canon PowerShot S3 IS,  
Canon PowerShot S30,  
Canon PowerShot S40,  
Canon PowerShot S45,  
Canon PowerShot S5 IS,  
Canon PowerShot S50,  
Canon PowerShot S60,  
Canon PowerShot S70,  
Canon PowerShot S90,  
Canon PowerShot S95,  
Canon PowerShot SD300,  
Canon PowerShot SD750,  
Canon PowerShot SD950,  
Canon PowerShot SX1 IS,  
Canon PowerShot SX10 IS,  
Canon PowerShot SX100 IS,  
Canon PowerShot SX110 IS,  
Canon PowerShot SX120 IS,  
Canon PowerShot SX130 IS,  
Canon PowerShot SX160 IS,  
Canon PowerShot SX20 IS,  
Canon PowerShot SX220 HS,  
Canon PowerShot SX30 IS,  
Canon PowerShot SX50 HS,  
Canon PowerShot SX510 HS,  
Canon PowerShot SX60 HS,  
Canon PowerShot SX70 HS,  
Canon PowerShot V1,  
Casio EX-10,  
Casio EX-100,  
Casio EX-100F,  
Casio EX-100PRO,**

**Casio EX-F1,  
Casio EX-FC300S,  
Casio EX-FC400S,  
Casio EX-FH100,  
Casio EX-FH20,  
Casio EX-FH25,  
Casio Exlim Pro 505,  
Casio Exlim Pro 600,  
Casio Exlim Pro 700,  
Casio EX-S100,  
Casio EX-S20,  
Casio EX-Z1050,  
Casio EX-Z1080,  
Casio EX-Z4,  
Casio EX-Z50,  
Casio EX-Z500,  
Casio EX-Z55,  
Casio EX-Z60,  
Casio EX-Z75,  
Casio EX-Z750,  
Casio EX-Z8,  
Casio EX-Z850,  
Casio EX-ZR100,  
Casio EX-ZR1000,  
Casio EX-ZR1100,  
Casio EX-ZR1200,  
Casio EX-ZR1300,  
Casio EX-ZR1500,  
Casio EX-ZR3000,  
Casio EX-ZR3100,  
Casio EX-ZR3200,  
Casio EX-ZR3500,  
Casio EX-ZR3600,  
Casio EX-ZR3700,  
Casio EX-ZR4000/5000,  
Casio EX-ZR4100,  
Casio EX-ZR5100,  
Casio EX-ZR700,  
Casio EX-ZR710,  
Casio EX-ZR750,  
Casio EX-ZR800,**

Casio EX-ZR850,  
Casio QV-2000UX,  
Casio QV-3000EX,  
Casio QV-3500EX,  
Casio QV-4000,  
Casio QV-5700,  
Casio QV-R41,  
Casio QV-R51,  
Casio QV-R61,  
DJI Mavic 3,  
DXO One,  
Epson R-D1,  
Epson R-D1s,  
Epson R-D1x,  
Foculus 531C,  
FujiFilm E505,  
FujiFilm E550,  
FujiFilm E900,  
FujiFilm F505EXR,  
FujiFilm F550EXR,  
FujiFilm F600EXR,  
FujiFilm F605EXR,  
FujiFilm F700,  
FujiFilm F710,  
FujiFilm F770EXR,  
FujiFilm F775EXR,  
FujiFilm F800,  
FujiFilm F800EXR,  
FujiFilm F810,  
FujiFilm F900EXR,  
FujiFilm GFX 100,  
FujiFilm GFX 100 II,  
FujiFilm GFX 100RF,  
FujiFilm GFX 100S,  
FujiFilm GFX 100S II,  
FujiFilm GFX 50R,  
FujiFilm GFX 50S,  
FujiFilm GFX 50S II,  
FujiFilm HS10/HS11,  
FujiFilm HS20EXR,  
FujiFilm HS22EXR,

**FujiFilm HS30EXR,  
FujiFilm HS33EXR,  
FujiFilm HS35EXR,  
FujiFilm HS50EXR,  
FujiFilm IS-1,  
FujiFilm ISPro,  
FujiFilm S1,  
FujiFilm S100FS,  
FujiFilm S200EXR,  
FujiFilm S205EXR,  
FujiFilm S20Pro,  
FujiFilm S2Pro,  
FujiFilm S3Pro,  
FujiFilm S5000,  
FujiFilm S5100/S5500,  
FujiFilm S5200/S5600,  
FujiFilm S5Pro,  
FujiFilm S6000fd,  
FujiFilm S6500fd,  
FujiFilm S7000,  
FujiFilm S9000/S9500,  
FujiFilm S9100/S9600,  
FujiFilm SL1000,  
FujiFilm X10,  
FujiFilm X100,  
FujiFilm X100f,  
FujiFilm X100S,  
FujiFilm X100T,  
FujiFilm X100V,  
FujiFilm X100VI,  
FujiFilm X20,  
FujiFilm X30,  
FujiFilm X70,  
FujiFilm X-A1,  
FujiFilm X-A10,  
FujiFilm X-A2,  
FujiFilm X-A20,  
FujiFilm X-A3,  
FujiFilm X-A5,  
FujiFilm X-A7,  
FujiFilm X-E1,**

**FujiFilm X-E2,  
FujiFilm X-E2S,  
FujiFilm X-E3,  
FujiFilm X-E4,  
FujiFilm X-E5,  
FujiFilm XF1,  
FujiFilm XF10,  
FujiFilm X-H1,  
FujiFilm X-H2,  
FujiFilm X-H2S,  
FujiFilm X-M1,  
FujiFilm X-M5,  
FujiFilm X-Pro1,  
FujiFilm X-Pro2,  
FujiFilm X-Pro3,  
FujiFilm XQ1,  
FujiFilm XQ2,  
FujiFilm X-S1,  
FujiFilm X-S10,  
FujiFilm X-S20,  
FujiFilm X-T1 Graphite Silver,  
FujiFilm X-T1 IR,  
FujiFilm X-T1,  
FujiFilm X-T10,  
FujiFilm X-T100,  
FujiFilm X-T2,  
FujiFilm X-T20,  
FujiFilm X-T200,  
FujiFilm X-T3,  
FujiFilm X-T30,  
FujiFilm X-T30 II,  
FujiFilm X-T30 III,  
FujiFilm X-T4,  
FujiFilm X-T5,  
FujiFilm X-T50,  
GITUP GIT2,  
GITUP GIT2P,  
Google Pixel 2 XL,  
Google Pixel 2,  
Google Pixel XL,  
Google Pixel,**

Hasselblad 503CWD,  
Hasselblad A6D-100c,  
Hasselblad CF-22,  
Hasselblad CF-22MS,  
Hasselblad CF-31,  
Hasselblad CF-39,  
Hasselblad CF-39MS,  
Hasselblad CFH-22,  
Hasselblad CFH-39,  
Hasselblad CFV,  
Hasselblad CFV-50c,  
Hasselblad CFV-100c,  
Hasselblad H2D-22,  
Hasselblad H2D-39,  
Hasselblad H3D-22,  
Hasselblad H3D-31,  
Hasselblad H3D-39,  
Hasselblad H3DII-22,  
Hasselblad H3DII-31,  
Hasselblad H3DII-39,  
Hasselblad H3DII-50,  
Hasselblad H4D-31,  
Hasselblad H4D-40,  
Hasselblad H4D-50,  
Hasselblad H4D-60,  
Hasselblad H5D-40,  
Hasselblad H5D-50,  
Hasselblad H5D-50c,  
Hasselblad H5D-60,  
Hasselblad H6D-100c,  
Hasselblad HV,  
Hasselblad L1D-20c,  
Hasselblad Lunar,  
Hasselblad Lusso,  
Hasselblad Stellar II,  
Hasselblad Stellar,  
Hasselblad True Zoom,  
Hasselblad V96C,  
Hasselblad X1D II 50C,  
Hasselblad X1D,  
Hasselblad X2D 100C,

Hasselblad X2D II 100C,  
HTC 10,  
HTC MyTouch 4G,  
HTC One (A9),  
HTC One (M9),  
HTC UltraPixel,  
Huawei Honor9,  
Huawei L09,  
Huawei Mate10(BLA-L29),  
Huawei P9,  
Imacon Ixpress 132C,  
Imacon Ixpress 384, 384C,  
Imacon Ixpress 528C,  
Imacon Ixpress 96, 96C,  
ISG 2020x1520,  
JaiPulnix BB-500CL,  
JaiPulnix BB-500GE,  
Kinefinity KineMINI,  
Kinefinity KineRAW Mini,  
Kinefinity KineRAW S35,  
Kodak C330,  
Kodak C603,  
Kodak DC120,  
Kodak DC20,  
Kodak DC25,  
Kodak DC40,  
Kodak DC50,  
Kodak DCS Pro 14n,  
Kodak DCS Pro 14nx,  
Kodak DCS Pro SLR/c,  
Kodak DCS Pro SLR/n,  
Kodak DCS200,  
Kodak DCS315C,  
Kodak DCS330C,  
Kodak DCS420,  
Kodak DCS460,  
Kodak DCS460A,  
Kodak DCS460D,  
Kodak DCS520C,  
Kodak DCS620C,  
Kodak DCS620X,

**Kodak DCS660C,  
Kodak DCS660M,  
Kodak DCS720X,  
Kodak DCS760C,  
Kodak DCS760M,  
Kodak EOSDCS1,  
Kodak EOSDCS3B,  
Kodak KAI-0340,  
Kodak NC2000F,  
Kodak P712,  
Kodak P850,  
Kodak P880,  
Kodak PB645C,  
Kodak PB645H,  
Kodak PB645M,  
Kodak ProBack,  
Kodak S-1,  
Kodak Z1015,  
Kodak Z980,  
Kodak Z981,  
Kodak Z990,  
Konica KD-400Z,  
Konica KD-510Z,  
Leaf AFi 5,  
Leaf AFi 6,  
Leaf AFi 7,  
Leaf AFi-II 10,  
Leaf AFi-II 10R,  
Leaf AFi-II 6,  
Leaf AFi-II 7,  
Leaf Aptus 17,  
Leaf Aptus 22,  
Leaf Aptus 54S,  
Leaf Aptus 65,  
Leaf Aptus 65S,  
Leaf Aptus 75,  
Leaf Aptus 75S,  
Leaf Aptus-II 10,  
Leaf Aptus-II 10R,  
Leaf Aptus-II 12,  
Leaf Aptus-II 12R,**

**Leaf Aptus-II 5,  
Leaf Aptus-II 6,  
Leaf Aptus-II 7,  
Leaf Aptus-II 8,  
Leaf Cantare XY,  
Leaf Cantare,  
Leaf CatchLight,  
Leaf CMost,  
Leaf Credo 40,  
Leaf Credo 50,  
Leaf Credo 60,  
Leaf Credo 80 (low compression mode only),  
Leaf DCB-II,  
Leaf Valeo 11,  
Leaf Valeo 17,  
Leaf Valeo 17wi,  
Leaf Valeo 22,  
Leaf Valeo 22wi,  
Leaf Valeo 6,  
Leaf Volare,  
Leica C (Typ 112),  
Leica CL,  
Leica Digilux 2,  
Leica Digilux 3,  
Leica Digital-Modul-R,  
Leica D-Lux (Typ 109),  
Leica D-LUX2,  
Leica D-LUX3,  
Leica D-LUX4,  
Leica D-LUX5,  
Leica D-LUX6,  
Leica D-LUX7,  
Leica D-LUX8,  
Leica D-LUXY,  
Leica M (Typ 240),  
Leica M (Typ 262),  
Leica M Monochrom,  
Leica M Monochrom (Typ 246),  
Leica M10,  
Leica M10 Monochrom,  
Leica M10-D,**

**Leica M10-P,  
Leica M10-R,  
Leica M11,  
Leica M11 Monochrom,  
Leica M8,  
Leica M8.2,  
Leica M9,  
Leica M EV1,  
Leica M-D (Typ 262),  
Leica M-E,  
Leica M-P,  
Leica Q (Typ 116),  
Leica Q2,  
Leica Q2 Monochrom,  
Leica Q3,  
Leica Q3 Monochrom,  
Leica Q3 43,  
Leica Q-P,  
Leica R8,  
Leica S (Typ 007),  
Leica S,  
Leica S2,  
Leica S3,  
Leica SL (Typ 601),  
Leica SL2,  
Leica SL2-S,  
Leica SL3,  
Leica T (Typ 701),  
Leica TL,  
Leica TL2,  
Leica V-Lux (Typ 114),  
Leica V-LUX1,  
Leica V-LUX2,  
Leica V-LUX3,  
Leica V-LUX4,  
Leica V-LUX5,  
Leica X (Typ 113),  
Leica X VARIO (Typ 107),  
Leica X1,  
Leica X2,  
Leica X-E (Typ 102),**

**Leica X-U (Typ 113),**  
**Lenovo a820,**  
**LG G3,**  
**LG G4,**  
**LG VS995,**  
**Logitech Fotoman Pixtura,**  
**Mamiya DM22,**  
**Mamiya DM28,**  
**Mamiya DM33,**  
**Mamiya DM40,**  
**Mamiya DM56,**  
**Mamiya M18,**  
**Mamiya M22,**  
**Mamiya M31,**  
**Mamiya ZD,**  
**Meizy MX4,**  
**Micron 2010,**  
**Minolta Alpha/Dynax/Maxxum 5D,**  
**Minolta Alpha/Dynax/Maxxum 7D,**  
**Minolta DiMAGE 5,**  
**Minolta DiMAGE 7,**  
**Minolta DiMAGE 7Hi,**  
**Minolta DiMAGE 7i,**  
**Minolta DiMAGE A1,**  
**Minolta DiMAGE A2,**  
**Minolta DiMAGE A200,**  
**Minolta DiMAGE G400,**  
**Minolta DiMAGE G500,**  
**Minolta DiMAGE G530,**  
**Minolta DiMAGE G600,**  
**Minolta DiMAGE Z2,**  
**Motorola PIXL,**  
**Nikon 1 AW1,**  
**Nikon 1 J1,**  
**Nikon 1 J2,**  
**Nikon 1 J3,**  
**Nikon 1 J4,**  
**Nikon 1 J5,**  
**Nikon 1 S1,**  
**Nikon 1 S2,**  
**Nikon 1 V1,**

**Nikon 1 V2,  
Nikon 1 V3,  
Nikon 2 S1,  
Nikon Coolpix A,  
Nikon Coolpix A1000,  
Nikon Coolpix B700,  
Nikon Coolpix P1000,  
Nikon Coolpix P330,  
Nikon Coolpix P340,  
Nikon Coolpix P1100,  
Nikon Coolpix P6000,  
Nikon Coolpix P7000,  
Nikon Coolpix P7100,  
Nikon Coolpix P7700,  
Nikon Coolpix P7800,  
Nikon Coolpix P950,  
Nikon Coolpix S6,  
Nikon D1,  
Nikon D100,  
Nikon D1H,  
Nikon D200,  
Nikon D2H,  
Nikon D2Hs,  
Nikon D2X,  
Nikon D2Xs,  
Nikon D3,  
Nikon D300,  
Nikon D3000,  
Nikon D300s,  
Nikon D3100,  
Nikon D3200,  
Nikon D3300,  
Nikon D3400,  
Nikon D3500,  
Nikon D3s,  
Nikon D3X,  
Nikon D4,  
Nikon D40,  
Nikon D40X,  
Nikon D4s,  
Nikon D5,**

**Nikon D50,  
Nikon D500,  
Nikon D5000,  
Nikon D5100,  
Nikon D5200,  
Nikon D5300,  
Nikon D5500,  
Nikon D5600,  
Nikon D6,  
Nikon D60,  
Nikon D600,  
Nikon D610,  
Nikon D70,  
Nikon D700,  
Nikon D7000,  
Nikon D70s,  
Nikon D7100,  
Nikon D7200,  
Nikon D750,  
Nikon D7500,  
Nikon D780,  
Nikon D80,  
Nikon D800,  
Nikon D800E,  
Nikon D810,  
Nikon D810A,  
Nikon D850,  
Nikon D90,  
Nikon Df,  
Nikon E2100,  
Nikon E2500,  
Nikon E3200,  
Nikon E3700,  
Nikon E4300,  
Nikon E4500,  
Nikon E5000,  
Nikon E5400,  
Nikon E5700,  
Nikon E700,  
Nikon E800,  
Nikon E8400,**

**Nikon E8700,**  
**Nikon E880,**  
**Nikon E8800,**  
**Nikon E900,**  
**Nikon E950,**  
**Nikon E990,**  
**Nikon E995,**  
**Nikon Z f,**  
**Nikon Z fc,**  
**Nikon Z30,**  
**Nikon Z50,**  
**Nikon Z50 II,**  
**Nikon Z5,**  
**Nikon Z5 II,**  
**Nikon Z6,**  
**Nikon Z6 II,**  
**Nikon Z6 III,**  
**Nikon Z7,**  
**Nikon Z7 II,**  
**Nikon Z8,**  
**Nikon Z9,**  
**Nokia Lumia 1020,**  
**Nokia Lumia 1520,**  
**Nokia Lumia 950 XL,**  
**Nokia N95,**  
**Nokia X2,**  
**Olympus AIR A01,**  
**Olympus C3030Z,**  
**Olympus C5050Z,**  
**Olympus C5060Z,**  
**Olympus C7070WZ,**  
**Olympus C70Z / C7000Z,**  
**Olympus C740UZ,**  
**Olympus C770UZ,**  
**Olympus C8080WZ,**  
**Olympus E-1,**  
**Olympus E-10,**  
**Olympus E-20,**  
**Olympus E-3,**  
**Olympus E-30,**  
**Olympus E-300,**

**Olympus E-330,  
Olympus E-400,  
Olympus E-410,  
Olympus E-420,  
Olympus E-450,  
Olympus E-5,  
Olympus E-500,  
Olympus E-510,  
Olympus E-520,  
Olympus E-600,  
Olympus E-620,  
Olympus E-M1,  
Olympus E-M1 Mark II\*,  
Olympus E-M1 Mark III\*,  
Olympus E-M1X\*,  
Olympus E-M10 Mark II,  
Olympus E-M10 Mark III,  
Olympus E-M10 Mark IV,  
Olympus E-M10,  
Olympus E-M5 Mark II\*,  
Olympus E-M5 Mark III\*,  
Olympus E-M5,  
Olympus E-P1,  
Olympus E-P2,  
Olympus E-P3,  
Olympus E-P5,  
Olympus E-P7,  
Olympus E-PL1,  
Olympus E-PL10,  
Olympus E-PL1s,  
Olympus E-PL2,  
Olympus E-PL3,  
Olympus E-PL5,  
Olympus E-PL6,  
Olympus E-PL7,  
Olympus E-PL8,  
Olympus E-PL9,  
Olympus E-PM1,  
Olympus E-PM2,  
Olympus Pen F\*,  
Olympus SH-2,**

Olympus SH-3,  
Olympus SP310,  
Olympus SP320,  
Olympus SP350,  
Olympus SP500UZ,  
Olympus SP510UZ,  
Olympus SP550UZ,  
Olympus SP560UZ,  
Olympus SP565UZ,  
Olympus SP570UZ,  
Olympus STYLUS1,  
Olympus STYLUS1s,  
Olympus TG-4,  
Olympus TG-5,  
Olympus TG-6,  
Olympus X200 / D560Z / C350Z,  
Olympus XZ-1,  
Olympus XZ-10,  
Olympus XZ-2 iHS,  
Olympus XZ-2,  
OM System OM-1\*,  
OM System OM-1 Mark II\*,  
OM System OM-3\*,  
OM System OM-5\*,  
OM System OM-5 Mark II\*,  
OM System TG-7,  
OnePlus A3303,  
OnePlus A5000,  
OnePlus One,  
Panasonic DC-FZ1000 II / FZ1000M2 / DC-FZ10002,  
Panasonic DC-FZ80 / DC-FZ81 / DC-FZ82 / DC-FZ83,  
Panasonic DC-G9\*\*,  
Panasonic DC-G9 II\*\*,  
Panasonic DC-G90 / DC-G91 / DC-G95 / DC-G99,  
Panasonic DC-G95D,  
Panasonic DC-G97,  
Panasonic DC-G100 / DC-G110,  
Panasonic DC-G100D,  
Panasonic DC-GF10 / DC-GF90 / DC-GX880,  
Panasonic DC-GH5,  
Panasonic DC-GH5 II,

Panasonic DC-GH5S,  
Panasonic DC-GH6\*\*,  
Panasonic DC-GH7\*\*,  
Panasonic DC-GX800 / DC-GX850 / DC-GF9,  
Panasonic DC-GX9 / DC-GX7MK3,  
Panasonic DC-LX100 II,  
Panasonic DC-S1\*\*,  
Panasonic DC-S1 II\*\*,  
Panasonic DC-S1 IIE\*\*,  
Panasonic DC-S1H\*\*,  
Panasonic DC-S1R\*\*,  
Panasonic DC-S1R II\*\*,  
Panasonic DC-S5\*\*,  
Panasonic DC-S5 II\*\*,  
Panasonic DC-S5 IIX\*\*,  
Panasonic DC-S9\*\*,  
Panasonic DC-TZ90 / DC-ZS70 / DC-TZ91 / DC-TZ92 / DC-TZ93,  
Panasonic DC-TZ95 / DC-ZS80 / TZ96 / TZ97,  
Panasonic DC-TZ95D / DC-ZS80D / DC-TZ96D,  
Panasonic DC-TZ99 / DC-ZS99.  
Panasonic DC-TZ200 / DC-ZS200 / DC-TZ202 / DC-TZ220 / DC-ZS220 / DC-TX2,  
Panasonic DMC-CM1,  
Panasonic DMC-CM10,  
Panasonic DMC-FX150,  
Panasonic DMC-FZ100,  
Panasonic DMC-FZ1000,  
Panasonic DMC-FZ150,  
Panasonic DMC-FZ18,  
Panasonic DMC-FZ200,  
Panasonic DMC-FZ2000 / DMC-FZ2500 / DMC-FZH1,  
Panasonic DMC-FZ28,  
Panasonic DMC-FZ30,  
Panasonic DMC-FZ300 / DMC-FZ330,  
Panasonic DMC-FZ35 / DMC-FZ38,  
Panasonic DMC-FZ40 / DMC-FZ45,  
Panasonic DMC-FZ45,  
Panasonic DMC-FZ50,  
Panasonic DMC-FZ7,  
Panasonic DMC-FZ70,  
Panasonic DMC-FZ72,  
Panasonic DMC-FZ8,

**Panasonic DMC-G1,  
Panasonic DMC-G10,  
Panasonic DMC-G2,  
Panasonic DMC-G3,  
Panasonic DMC-G5,  
Panasonic DMC-G6,  
Panasonic DMC-G7 / DMC-G70,  
Panasonic DMC-G8 / DMC-G80 / DMC-G81 / DMC-G85,  
Panasonic DMC-GF1,  
Panasonic DMC-GF2,  
Panasonic DMC-GF3,  
Panasonic DMC-GF5,  
Panasonic DMC-GF6,  
Panasonic DMC-GF7,  
Panasonic DMC-GF8,  
Panasonic DMC-GH1,  
Panasonic DMC-GH2,  
Panasonic DMC-GH3,  
Panasonic DMC-GH4,  
Panasonic DMC-GM1,  
Panasonic DMC-GM1s,  
Panasonic DMC-GM5,  
Panasonic DMC-GX1,  
Panasonic DMC-GX7,  
Panasonic DMC-GX8,  
Panasonic DMC-GX80 / DMC-GX85 / DMC-GX7MK2,  
Panasonic DMC-L1,  
Panasonic DMC-L10,  
Panasonic DMC-LC1,  
Panasonic DMC-LF1,  
Panasonic DMC-LX1,  
Panasonic DMC-LX100,  
Panasonic DMC-LX2,  
Panasonic DMC-LX3,  
Panasonic DMC-LX5,  
Panasonic DMC-LX7,  
Panasonic DMC-LX9 / DMC-LX10 / DMC-LX15,  
Panasonic DMC-TZ60 / DMC-TZ61 / DMC-ZS40,  
Panasonic DMC-TZ70 / DMC-TZ71 / DMC-ZS50,  
Panasonic DMC-TZ80 / DMC-TZ81 / DMC-TZ85 / DMC-ZS60,  
Panasonic DMC-TZ82,**

Panasonic DMC-ZS100 / DMC-ZS110 / DMC-TZ100 / DMC-TZ101 / DMC-TZ110 / DMC-TX1,  
Panasonic DMC-ZS40 / DMC-TZ60 / DMC-TZ61,  
Panasonic DMC-ZS50 / DMC-TZ70 / DMC-TZ71,  
Panasonic DMC-ZS60 / DMC-TZ80 / DMC-TZ81 / TZ85,  
PARROT Bebop 2,  
PARROT Bebop Drone,  
Pentax \*ist D,  
Pentax \*ist DL,  
Pentax \*ist DL2,  
Pentax \*ist DS,  
Pentax \*ist DS2,  
Pentax 645D,  
Pentax 645Z,  
Pentax GR,  
Pentax K-01,  
Pentax K-1 II,  
Pentax K-1,  
Pentax K100D Super,  
Pentax K100D,  
Pentax K10D,  
Pentax K110D,  
Pentax K2000 / K-m,  
Pentax K200D,  
Pentax K20D,  
Pentax K-3,  
Pentax K-3 II,  
Pentax K-3 III,  
Pentax K-3 III Monochrome,  
Pentax K-30,  
Pentax K-5 II,  
Pentax K-5 IIs,  
Pentax K-5,  
Pentax K-50,  
Pentax K-500,  
Pentax K-7,  
Pentax K-70,  
Pentax KP,  
Pentax K-r,  
Pentax K-S1,  
Pentax K-S2,  
Pentax K-x,

**Pentax MX-1,  
Pentax Optio 33WR,  
Pentax Optio 750Z,  
Pentax Optio S,  
Pentax Optio S4,  
Pentax Q,  
Pentax Q10,  
Pentax Q7,  
Pentax QS-1,  
PhaseOne Achromatic+,  
PhaseOne H 10,  
PhaseOne H 20,  
PhaseOne H 25,  
PhaseOne IQ140,  
PhaseOne IQ150,  
PhaseOne IQ160,  
PhaseOne IQ180 IR,  
PhaseOne IQ180,  
PhaseOne IQ250,  
PhaseOne IQ260 Achromatic,  
PhaseOne IQ260,  
PhaseOne IQ280,  
PhaseOne IQ3 100MP,  
PhaseOne IQ3 50MP,  
PhaseOne IQ3 60MP,  
PhaseOne IQ3 80MP,  
PhaseOne IQ4 150MP,  
PhaseOne LightPhase,  
PhaseOne P 20,  
PhaseOne P 20+,  
PhaseOne P 21,  
PhaseOne P 21+,  
PhaseOne P 25,  
PhaseOne P 25+,  
PhaseOne P 30,  
PhaseOne P 30+,  
PhaseOne P 40+,  
PhaseOne P 45,  
PhaseOne P 45+,  
PhaseOne P 65,  
PhaseOne P 65+,**

**Photron BC2-HD,  
RaspberryPi Camera V2,  
RaspberryPi Camera,  
Ricoh GR Digital II,  
Ricoh GR Digital III,  
Ricoh GR Digital IV,  
Ricoh GR Digital,  
Ricoh GR II,  
Ricoh GR III,  
Ricoh GR IIIx,  
Ricoh GR,  
Ricoh GX100,  
Ricoh GX200,  
Ricoh GXR MOUNT A12,  
Ricoh GXR MOUNT A16 24-85mm F3.5-5.5,  
Ricoh GXR, GR A12 50mm F2.5 MACRO,  
Ricoh GXR, GR LENS A12 28mm F2.5,  
Ricoh GXR, GXR P10,  
Ricoh GXR, S10 24-72mm F2.5-4.4 VC,  
Rollei d530flex,  
Samsung EK-GN100,  
Samsung EK-GN110,  
Samsung EK-GN120,  
Samsung EK-KN120,  
Samsung EX1,  
Samsung EX2F,  
Samsung Galaxy Nexus,  
Samsung Galaxy NX (EK-GN120),  
Samsung Galaxy S3,  
Samsung Galaxy S6 (SM-G920F),  
Samsung Galaxy S7 (SM-G935F),  
Samsung Galaxy S7 Edge,  
Samsung Galaxy S7,  
Samsung Galaxy S8,  
Samsung Galaxy S8+,  
Samsung GX10,  
Samsung GX-1L,  
Samsung GX-1S,  
Samsung GX20,  
Samsung NX mini,  
Samsung NX U,**

Samsung NX1,  
Samsung NX10,  
Samsung NX100,  
Samsung NX1000,  
Samsung NX11,  
Samsung NX1100,  
Samsung NX20,  
Samsung NX200,  
Samsung NX2000,  
Samsung NX210,  
Samsung NX30,  
Samsung NX300,  
Samsung NX3000,  
Samsung NX300M,  
Samsung NX3300,  
Samsung NX5,  
Samsung NX500,  
Samsung Pro815,  
Samsung S85,  
Samsung S850,  
Samsung TL350,  
Samsung TL500,  
Samsung WB2000,  
Samsung WB550,  
Seitz Roundshot D2X,  
Seitz Roundshot D2Xs,  
Seitz Roundshot D3,  
Sigma BF,  
Sinar eMotion 22,  
Sinar eMotion 54,  
Sinar eMotion 75,  
Sinar eSpirit 65,  
Sinar eVolution 75,  
Sinar Sinarback 54,  
Sinar STI format,  
Sony A1 (ILCE-1)\*\*\*,  
Sony A1 II (ILCE-1M2)\*\*\*,  
Sony A100,  
Sony A200,  
Sony A230,  
Sony A290,

**Sony A300,  
Sony A3000 (ILCE-3000),  
Sony A33,  
Sony A330,  
Sony A35,  
Sony A350,  
Sony A3500 (ILCE-3500),  
Sony A37,  
Sony A380,  
Sony A390,  
Sony A450,  
Sony A500,  
Sony A5000 (ILCE-5000),  
Sony A5100 (ILCE-5100),  
Sony A55,  
Sony A550,  
Sony A560,  
Sony A57,  
Sony A58,  
Sony A580,  
Sony A6000 (ILCE-6000),  
Sony A6100 (ILCE-6100),  
Sony A6300 (ILCE-6300),  
Sony A6400 (ILCE-6400),  
Sony A6400A (ILCE-6400A),  
Sony A65,  
Sony A6500 (ILCE-6500),  
Sony A6600 (ILCE-6600),  
Sony A6700 (ILCE-6700),  
Sony A68 (ILCA-68),  
Sony A7 (ILCE-7),  
Sony A7 II (ILCE-A7M2),  
Sony A7 III (ILCE-A7M3),  
Sony A7 IV (ILCE-A7M4)\*\*\*,  
Sony A7 V (ILCE-A7M5)\*\*\*,  
Sony A700,  
Sony A77 II (ILCA-77M2),  
Sony A77,  
Sony A7C (ILCE-7C),  
Sony A7C II (ILCE-7CM2)\*\*\*,  
Sony A7CR (ILCE-7CR)\*\*\*,**

Sony A7R (ILCE-7R),  
Sony A7R II (ILCE-7RM2),  
Sony A7R III (ILCE-7RM3),  
Sony A7R IIIA (ILCE-7RM3A),  
Sony A7R IV (ILCE-7RM4),  
Sony A7R IVA (ILCE-7RM4A),  
Sony A7R V (ILCE-7RM5)\*\*\*,  
Sony A7S (ILCE-7S),  
Sony A7S II (ILCE-7SM2),  
Sony A7S III (ILCE-7SM3),  
Sony A850,  
Sony A9 (ILCE-9),  
Sony A9 II (ILCE-9M2),  
Sony A9 III (ILCE-9M3)\*\*\*,  
Sony A900,  
Sony A99 II (ILCA-99M2),  
Sony A99,  
Sony DSC-HX95,  
Sony DSC-HX99,  
Sony DSC-R1,  
Sony DSC-RX0 II,  
Sony DSC-RX0,  
Sony DSC-RX1,  
Sony DSC-RX10 II,  
Sony DSC-RX10 III,  
Sony DSC-RX10 IV,  
Sony DSC-RX10,  
Sony DSC-RX100 II,  
Sony DSC-RX100 III,  
Sony DSC-RX100 IV,  
Sony DSC-RX100 V,  
Sony DSC-RX100 VA,  
Sony DSC-RX100 VI,  
Sony DSC-RX100 VII,  
Sony DSC-RX100 VIIIA,  
Sony DSC-RX100,  
Sony DSC-RX1R,  
Sony DSC-RX1R II,  
Sony DSC-RX1R III\*\*\*,  
Sony DSC-V3,  
Sony FX2 (ILME-FX2),

**Sony FX30 (ILME-FX30),  
Sony IMX072,  
Sony IMX135,  
Sony IMX135-QCOM,  
Sony IMX214,  
Sony IMX219,  
Sony IMX219,  
Sony IMX230,  
Sony IMX298,  
Sony NEX-3,  
Sony NEX-3N,  
Sony NEX-5,  
Sony NEX-5N,  
Sony NEX-5R,  
Sony NEX-5T,  
Sony NEX-6,  
Sony NEX-7,  
Sony NEX-C3,  
Sony NEX-F3,  
Sony NEX-VG20,  
Sony NEX-VG30,  
Sony NEX-VG900,  
Sony QX1,  
Sony XCD-SX910CR,  
Sony Xperia 1 III,  
Sony ZV-E1,  
Sony ZV-E10,  
Sony ZV-E10 II,  
Sony ZV-1,  
Sony ZV-1 II,  
Yi M1,  
YUNEEC CGO3,  
YUNEEC CGO3P,  
YUNEEC CGO4,  
Zeiss ZX1,**

---

\* Olympus and OM System high resolution mode is not currently supported.

\*\* Panasonic high resolution mode is not currently supported.

\*\*\* Sony YCbCr cropped pseudo-raw or compressed format is not currently supported.

\*\*\*\* Image quality and raw format support are not yet finalized and may be updated in future releases.